

Vocera Badge Menus

The Badge Menu

Learn about the badge display which shows a series of menu screens that comprise the top level of the menu system.

You navigate the badge menus differently depending on the type of badge.

To navigate through B3000n or B3000 menus:

1. Press the Select button to display the menu, and then use the Up or Down buttons to navigate.




Note: The menu screens wrap in either direction if you keep pressing Up or Down.

To navigate through B2000 menus:

1. Press the Up, Select, or Down button to display the menu, and then use the Up or Down buttons to navigate.

On B3000n and B3000 badges, the Up, Select, and Down buttons are on the front of the badge. Up and Down depend on the orientation of the screen.

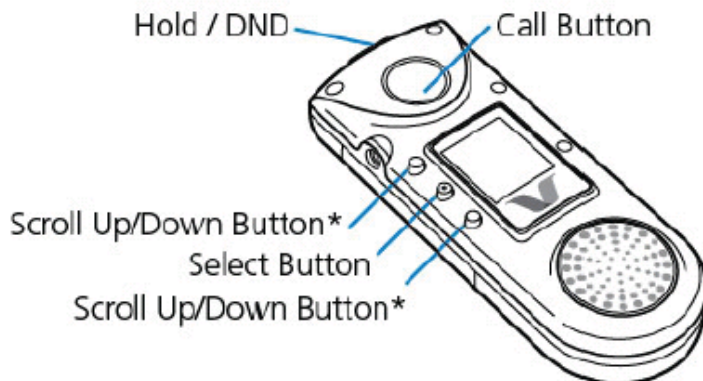


*Up and Down depend on screen orientation

Main Screen

The main screen appears when you turn on the badge. This screen has a status message area with symbols that show you the wireless network signal strength, the battery charge level, whether you are in speakerphone or headset mode, and whether you have unread text messages or unplayed voice messages.

The following figure shows the B3000n and B3000 main screen:

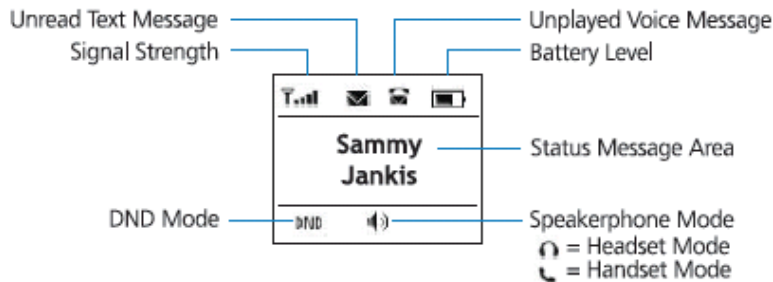

The status message area may show one of the following alerts:

Status Message	Meaning
Name – not blinking	The name of the person who is logged in to the Vocera system using this badge.
Name – blinking	<p>If someone is trying to call you, this shows you the name of the person who is calling. If you are already on a call, this shows the name of the person with whom you are currently speaking. If you are already on a call and you hear the Call Waiting tone, this displays the name of the person who is trying to call you.</p> <p>If you are in a conference, this shows its name. If you are receiving a broadcast, this shows the name of the person making the broadcast.</p> <p>If you received a message, this shows the name of the person who sent the message for 15 seconds.</p>
Vocera	Your badge is communicating with the Genie.
Logged out	No one is logged in with this badge.
Searching for Access Points or Off Network	The badge is out of network range or is not able to connect with the network. If you are sure you are within range of your network, contact your system administrator.
Searching for Server	The badge is within network range, but it is not communicating with the Vocera Server. See Why does my device display say "Searching for Server"?
Authenticating	The badge's credentials are being authenticated for network security.
Requesting IP Address	The badge is requesting an IP address from the DHCP server.

Messages Menu

Your badge can display text messages that were sent from email accounts, the Vocera User Console, or an application that integrates with the Vocera system, such as a nurse call system.

When you select Messages, the display shows one subject line for each text message. On B3000n and B3000 badges, the subject line for only one message is shown at a time. A closed envelope symbol next to a subject means you have not yet read that message; an open envelope means you have already read that message. An [S] means you have already read and saved that message. See [Reading Text Messages](#) for more information.

Settings Menu

The Settings menu (available on B3000n and B3000 badges) displays the following sub-menus for personal settings: Volume, Font, Privacy, Group Mode, Return Home, and Flip Screen. The Vocera Server preserves these settings whenever you log into a different B3000n or B3000 badge.

Return Home Command

The Return Home command (available on B3000n and B3000 badges) returns to the main screen.

Info Menu

The Info menu gives you information about the badge you are using and how it is connected to the network.

Most of this information is intended to be used by your system administrator for diagnostic purposes.

The Info menu provides the following information:

- **Battery.** The battery strength is given in volts (V). The badge operates correctly when the battery level is 3.5 V or greater.